

LED Sun Light DMX Sheet

mode1(4ch)

ch		level	
1	Dimmer All	0-255	0-Full
2	Focus	0-128	Wide-Spot
		129-255	Spot-Wide
3	Focus(Fine)	0-255	Focus fine control
4	Reset	255	Reset

mode2(5ch)

ch		level	
1	Dimmer All	0-255	0-Full
2	Stobe	0-7	Open
		8-15	Close
		16-127	0.5Hz-15Hz
		128-135	Open
		136-247	Random
		248-255	Open
3	Focus	0-128	Wide-Spot
		129-255	Spot-Wide
4	Focus(Fine)	0-255	Focus fine control
5	Reset	255	Reset

mode3(5ch)

ch		level	
1	Dimmer(front)	0-255	0-Full
2	Dimmer(rear)	0-255	0-Full
3	Focus	0-128	Wide-Spot
		129-255	Spot-Wide
4	Focus(Fine)	0-255	Focus fine control
5	Reset	255	Reset

mode4(6ch)

ch		level	
1	Dimmer(front)	0-255	0-Full
2	Dimmer(rear)	0-255	0-Full
3	Stobe	0-7	Open
		8-15	Close
		16-127	0.5Hz-15Hz
		128-135	Open
		136-247	Random
		248-255	Open
4	Focus	0-128	Wide-Spot
		129-255	Spot-Wide
5	Focus(Fine)	0-255	Focus fine control
6	Reset	255	Reset

	Mode 1	Mode 2	Mode 3	Mode 4
	4ch	5ch	5ch	6ch
CH1	Dim All	Dim All	Dim 1(front)	Dim 1(front)
CH2	Focus	Strobe	Dim 2(rear)	Dim 2(rear)
CH3	Focus(Fine)	Focus	Focus	Strobe
CH4	Reset	Focus(Fine)	Focus(Fine)	Focus
CH5		Reset	Reset	Focus(Fine)
CH6				Reset

Focus (Beam Size)

