

Zee Flower ++ (PLUS PLUS)


<u>定格入力電圧</u>	単相 100V～240V (50Hz/60Hz)
<u>定格消費電力</u>	200V/ 6.2A (実測値) 100V/ 12.5A (実測値) ※200Vでの使用を推奨
<u>使用ランプ/光源</u>	Roccer RSD 132W 6個 中心部にRGBWマルチチップLED 1色60W×4
<u>配光角度</u>	・ビームのクロス位置 500mm～ストレート (制御可能) ・ビーム角度 0°～20° (プリズム無し) ・ビーム角度 0°～50° (プリズムあり)
<u>PAN/TILT可動域</u>	PAN 290° TILT 300°
<u>DMX使用チャンネル数</u>	10ch/25ch/ 16ch/31ch
<u>電源入力</u>	Neutrik PowerCon (20D-パワコン付属)
<u>DMX信号</u>	XLR5P IN/OUT ターミネーターON/OFFスイッチ付き
<u>重量</u>	吊り仕様 ハンガー×2 込み: 約63Kg 置き仕様 ハンガー無し: 約61Kg ※落下防止ワイヤー×2本 付属

赤字はZeeFlowerPLUSからの変更点

Zee Flower ++ DMXチャート

	Mode 0	Mode 1	Mode 2	Mode 3
DMX ADDRESS	全コモン	全バラ	++ 全コモン	++ 全バラ
1	ROTATE	ROTATE	ROTATE	ROTATE
2	PAN	PAN	PAN	PAN
3	PAN FINE	PAN FINE	PAN FINE	PAN FINE
4	TILT	TILT	TILT	TILT
5	TILT FINE	TILT FINE	TILT FINE	TILT FINE
6	DOWSER	DOWSER1	DOWSER	DOWSER1
7	COLOR	COLOR1	COLOR	COLOR1
8	PRISM	PRISM1	PRISM	PRISM1
9	LAMP CONTROL	DOWSER2	LAMP CONTROL	DOWSER2
10	RESET	COLOR2	RESET	COLOR2
11		PRISM2	LED R	PRISM2
12		DOWSER3	LED G	DOWSER3
13		COLOR3	LED B	COLOR3
14		PRISM3	LED W	PRISM3
15		DOWSER4	Beam Control	DOWSER4
16		COLOR4	Beam Control Fine	COLOR4
17		PRISM4		PRISM4
18		DOWSER5		DOWSER5
19		COLOR5		COLOR5
20		PRISM5		PRISM5
21		DOWSER6		DOWSER6
22		COLOR6		COLOR6
23		PRISM6		PRISM6
24		LAMP CONTROL		LAMP CONTROL
25		RESET		RESET
26				LED R
27				LED G
28				LED B
29				LED W
30				Beam Control
31				Beam Control Fine
32				
33				
34				
35				

赤字はZeeFlowerPLUSからの変更点

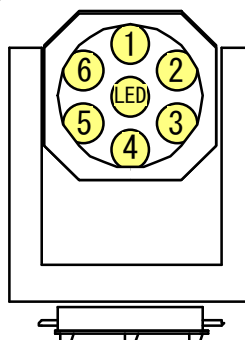

Zee Flower ++ DMXパラメーター

BEAM ROTATE

0	Stop
1	Rotate CW Fast
126	Rotate CW Slow
127	Stop
128	Stop
129	Rotate CCW Slow
254	Rotate CCW Fast
255	Stop

PAN

0	290°
255	

PAN/FINE

0	
255	

TILT

0	300°
255	

TILT/FINE

0	
255	

DIMMER

0	close
255	open

COLOR WHEEL

0	White
7	White-Dark Blue
13	Dark Blue
20	Dark Blue-Red
27	Red
33	Red-Amber
40	Amber
47	Amber-Blue
53	Blue
60	Blue-Green
67	Green
74	Green-Magenta
81	Magenta
87	Magenta-Yellow
94	Yellow
101	Yellow-Light Glue
107	Light Blue
114	Light Blue-Pink
121	Pink
128	Pink-Lime Green
134	Lime Green
141	Lime Green-Amber
148	Amber
155	Amber-Purple
161	Purple
168	Purple-CTB
175	CTB
181	CTB-CTO
188	CTO
195	CTO-White
201	White
203	Rotate CW Slow
227	Rotate CW Fast
228	Stop
229	Stop
230	Stop
231	Rotate CCW Fast
255	Rotate CCW Slow

PRISM

0	open
255	full

Lamp Control

255	3秒保持でon
128	3秒保持でoff

Reset

250	3秒保持でreset
-----	------------

赤字はZeeFlowerPLUSからの変更点

Zee Flower ++ Color Wheel

Color wheel

0	1	2	3	4	5	6	7	8	9	10	11	12	13	14
														
Open	Dark Blue	Red	Light Amber	Blue	Green	Magenta	Yellow	Light Blue	Pink	Lime Green	Amber	Purple	CTB	CTO

赤字はZeeFlowerPLUSからの変更点